


## Line Bending KYDEX® Thermoplastic Sheet

TB - 142-C

### Introduction

Line bending is a common method for bending KYDEX® Sheet in a straight line. This process involves heating a narrow strip of the sheet and bending it to a particular angle (up to 180°). By heating a narrow strip of the sheet it allows only that area to bend and leaves the rest of the sheet flat and straight. This type of heater is often called Strip Heater, Line Bender, or Free Standing Heater. Below is an illustration of a simple Line Bender and the Gap Adjustment Shutters.

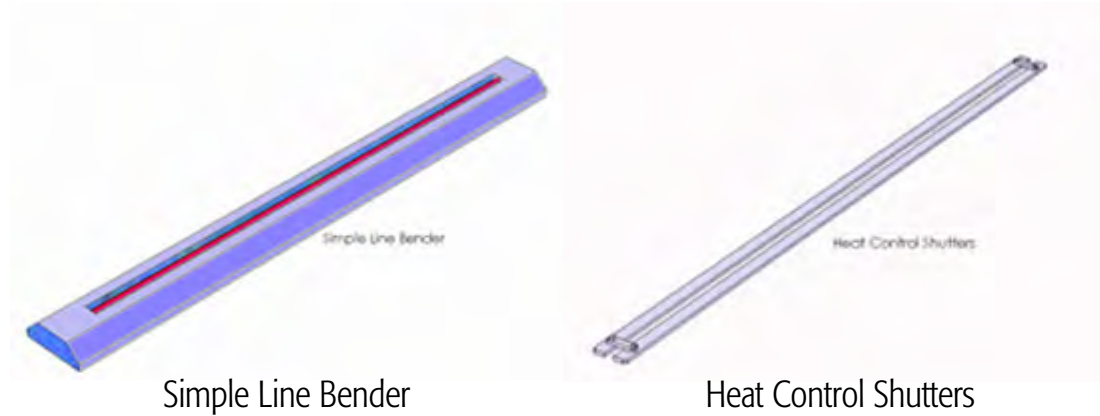

Simple Line Bender

Heat Control Shutters

### Types of Machines

#### Calrod Strip Heater

Consists of a calrod heating element recessed in a metal base. An adjustable shutter is placed above the heating element to allow adjustment of the gap to accommodate different thicknesses. This type of bender is good for intermittent use, but continuous production will allow the uncooled shutter to heat up and heat the sheet on the sides of the bend.

#### Straight Nichrome Resistance Wire Heater

Consists of a thin Nichrome resistance wire instead of a heating element. It has some advantages over calrod heaters in that the heating time is shorter, it requires lower voltage and has a more concentrated line of heat.

*CAUTION:* Ensure there are guards in place to prevent touching the Nichrome wire; it is a burn/shock hazard.

#### Coiled Resistance Wire

Consists of a coiled resistance wire in place of a straight wire. Coiled wires must be supported and can be difficult to distribute the coils evenly. Uneven distribution of the coils can cause temperature variation across the sheet's width, which could result in stress and distortion.

#### Radiant Quartz Tube Heaters

Consists of a coiled resistance wire housed in a quartz coated glass tube. These are among the most efficient sources of heat energy.

#### SEKISUI SPI

ISO 9001 and 14001 Certified

#### Customer Service

6685 Low St, Bloomsburg, PA 17815 USA

Phone: 800.325.3133, +1.570.389.5810

Outside the US: +1.570.389.5814

Fax: 800.452.0155, +1.570.387.7786

Email: [info@sekisui-spi.com](mailto:info@sekisui-spi.com)

#### Technical Service

Phone: 800.682.8758

Fax: +1.570.387.8722

Outside the US: +1.570.387.6997

[techservice@sekisui-spi.com](mailto:techservice@sekisui-spi.com)

[sekisui-spi.com](http://sekisui-spi.com)

## Line Bending KYDEX® Thermoplastic Sheet

TB - 142-C

### Guidelines

- The forming temperature of KYDEX® Sheet is between 330°F (166°C) and 380°F (193°C).
- Avoid overheating or heating the sheet too quickly, as this could cause bubbling or blistering. **IMPORTANT:** The temperature of KYDEX® Sheet should not exceed 400°F (204°).
- Heat a strip that is around three times as wide as the thickness of the sheet to be formed. For example, if the sheet is 0.157" (4.0mm) thick, heat a strip that is 0.472" (12.0mm) wide. Most machines should have the capability to vary the gap over the heater.
- When heating only one side, bend the part away from the heated side. For example, if the heating element is on the bottom, bend the sheet upward.
- Routing a V-groove along the desired line for bending will help ensure a sharp, straight bend with little to no bowing.

### Procedure

- 1) Adjust the gap over the heating rod to around three times the thickness of the sheet.
- 2) Turn the heating element on and set it to the appropriate temperature.
 

**NOTE:** Temperature will depend on the machine and material thickness. Start out low until you have found a setting that is suitable.
- 3) Place the sheet so that the strip that is to be heated is directly over the heating element.
- 4) Heat the sheet until it bends easily. If your machine does not have the capability to heat both the top and the bottom of the sheet you may flip the sheet occasionally to heat both sides.
 

**NOTE:** Do not touch the heated area. It will be hot and can burn you. If it is necessary to touch the heated area use cotton or heat resistant gloves.
- 5) Remove the sheet and quickly bend the sheet to the desired angle by hand or by placing it in a jig.
- 6) Allow the material to cool sufficiently before removing it. You may use weights or clamps to keep it in place.

### Equipment Suppliers

**Barnes Plastic Welding Equipment Ltd.**  
 Unit 11, Hamilton Street  
 Blackburn, Lancashire  
 United Kingdom, BB2 4AJ  
 Phone: 01254 660910  
 Fax: 01254 660915  
 Email: [info@plasticweldingequipment.co.uk](mailto:info@plasticweldingequipment.co.uk)  
[www.plasticweldingequipment.co.uk](http://www.plasticweldingequipment.co.uk)

**FTM, Inc.**  
 327 Industrial Drive, Unit 1  
 Placerville, CA 95667 USA  
 Phone: 530.626.1986  
 Fax: 530.642.2602  
 Email: [info@123ftm.com](mailto:info@123ftm.com)  
[www.thefabricatorssource.com](http://www.thefabricatorssource.com)

**TAP Plastics, Inc.**  
 1859 Pacific Avenue  
 Stockton, CA 95204  
 Phone: 800.246.5055  
 Fax: 209.937.9400  
 Email: [info@tapplastics.com](mailto:info@tapplastics.com)  
[www.tapplastics.com](http://www.tapplastics.com)

**SEKISUI SPI**  
 ISO 9001 and 14001 Certified

**Customer Service**  
 6685 Low St, Bloomsburg, PA 17815 USA  
 Phone: 800.325.3133, +1.570.389.5810  
 Outside the US: +1.570.389.5814  
 Fax: 800.452.0155, +1.570.387.7786  
 Email: [info@sekisui-spi.com](mailto:info@sekisui-spi.com)

**Technical Service**  
 Phone: 800.682.8758  
 Fax: +1.570.387.8722  
 Outside the US: +1.570.387.6997  
[techservice@sekisui-spi.com](mailto:techservice@sekisui-spi.com)

[sekisui-spi.com](http://sekisui-spi.com)

Because we cannot anticipate or control the many different conditions under which this information and our products may be used, we do not guarantee the applicability of the accuracy of this information or the suitability of our products in any given situation. Users should conduct their own tests to determine the suitability of each product for their particular purposes. Data in the physical property table represents typical values and are to serve only as a guide for engineering design. Results are obtained from specimens under ideal laboratory conditions. Right to change physical properties as a result of technical progress is reserved. THE PRODUCTS DISCUSSED ARE SOLD WITHOUT WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR USE, EITHER EXPRESSED OR IMPLIED, EXCEPT AS PROVIDED IN OUR STANDARD TERMS AND CONDITIONS OF SALE. Buyer assumes all responsibility for loss or damage arising from the handling and use of our products, whether done in accordance with directions or not. In no event shall the supplier or the manufacturer be liable for incidental or consequential damages. Also, statements concerning the possible use of our products are not intended as recommendations to use our products in the infringement of any patent. Consult local code and regulatory agencies for specific requirements regarding code compliance, transporting, processing, recycling and disposal of our product. Product not intended for use as a heat resistant surface. Texture, product grade and other conditions may cause variations in appearance.

This information supersedes all previously published data.