

## Metallic Effects and CIE \*L\*a\*b Colour Space

TB - 130-B

### Optical Properties of Metallic Thermoplastic Sheet

### Key Characteristics of Metallic Sheet

Without the knowledge of how metallic colourants behave (flakes from various sources used to create a metallic appearance in plastic), it is difficult to describe and illustrate the visual changes that are perceived as well as how to accurately measure metallic colours. The optical properties of metallic sheet are determined by a number of individual effects, which could include all of the following characteristics:

- Opacity
- Brilliance (degree of sparkle or gloss reflecting from surface)
- Pigment loading (concentration)
- Flop (observed change in colour/brightness with a change in viewing angle)

These individual characteristics are influenced by properties of the metallic colourants, which include the type of pigment, particle size, particle distribution, smoothness and shape. When all these individual components are introduced into extruded plastic, it makes for a complex combination of possible appearances.

#### Flop (variations in appearance):

Be aware that the same qualities creating depth and brilliance also can cause variations in appearance. Specifically, metallics can have variation in the level of brightness creating dark and light areas. The highly reflective properties of metallic flake mean that the same surface will look different depending on the viewing angle and the intensity and type of the light source. In addition, the general orientation and direction of the metallic flakes in the plastic will affect the brightness of the colour. This is typically an undesirable but necessary reality of metallic colourants, and is sometimes referred to as “flop.”

Metallic flakes act as tiny mirrors, Figure 1. The visual intensity of these pigments change in relation to the viewing angle. Maximum intensity is achieved at the angle of reflection. Minimum intensity is achieved for an angle far away from the reflection angle. The factors affecting flop are the shape and size of the pigment particles, their surface smoothness, particle distribution, and particle orientation.

To help minimize the appearance of “flop”, a directional laser etch, video jet, or sticker is used to indicate the direction of flake orientation. This will help designers and thermoformers to properly match sheet and part directionality for a more consistent appearance.

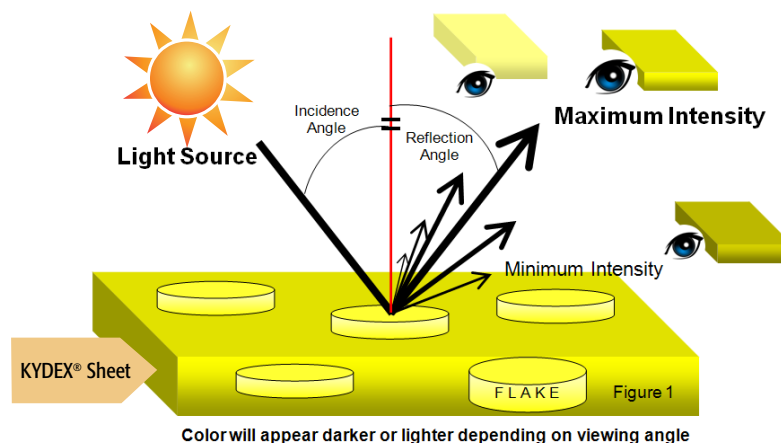


Figure 1

SEKISUI SPI  
ISO 9001 and 14001 Certified

Customer Service  
6685 Low St, Bloomsburg, PA 17815 USA  
Phone: 800.325.3133, +1.570.389.5810  
Outside the US: +1.570.389.5814  
Fax: 800.452.0155, +1.570.387.7786  
Email: info@sekisui-spi.com

Technical Service  
Phone: 800.682.8758  
Fax: +1.570.387.8722  
Outside the US: +1.570.387.6997  
techservice@sekisui-spi.com

sekisui-spi.com


## Metallic Effects and CIE \*L\*a\*b Colour Space

TB - 130-B

### Key Characteristics of Metallic Sheet

**Opacity:** To achieve an opaque/solid colour, pigments must absorb sufficient light to prevent it from reaching the substrate, or underlying material thus changing the appearance.

In contrast, to achieve high-quality metallic properties, metallic colourants rely on their lack of opacity (transparency), highly reflective characteristics, and particle orientation. Highly reflective particles create layers in the plastic matrix (Figure 2) that reflect some light but remain translucent enough to allow some light to pass through the surface. The thickness of the sample will determine the visual colour. If thin enough, some of the substrate colour will tint the actual metallic colour.

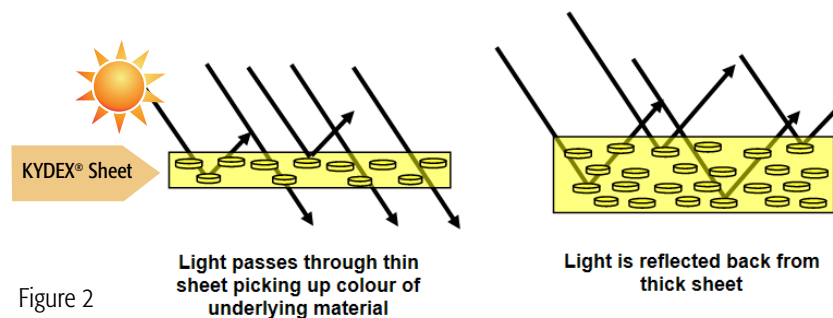

Thin gauges of KYDEX® 110 can be subject to a visual colour shift based on the substrate colour. Most metallic colours thicker than 3.2mm (.125”) should have minimal colour shift. However, if thermoformed to a thinner gauge, the same phenomenon will occur.

### Measuring Metallic Colours

The inability to accurately measure metallic colours has long been a problem. Conventional spectrophotometers for determining solid colours cannot handle texture differences as well as the optical properties of metallic sheet. Formulators, therefore, have relied mainly on their eyes to measure colour. At KYDEX, LLC metallic colours are measured with a standard spectrophotometer instrument as well as visually by a trained technician. Every metallic run is measured utilizing CIE \*L\*a\*b colour space, but the final decision is based on a visual check. For more information on CIE \*L\*a\*b and reading colour, please refer to Technical Brief 177 – Understanding CIE \*L\*a\*b Colour Space, <http://www.kydex.com/briefs/177.pdf>

Colour measurement is based solely on the energy that is reflected and returned to the instrument sensors. Energy from the source light of the instrument will pass through translucent metallic samples with differing results based upon thickness (Figure 2 above). Thin sample measurement varies the most due to bleed-through from substrate colour or sample holder.

Not only does transparency influence colour measurements, gloss and texture can interact as well to produce various effects on the primary surface of the sheet. Large differences in gloss will affect the colour measurement; a higher gloss produces a superior metallic effect. On the contrary, mechanical matting typically reduces the quality of the effect. To minimize this perceived difference, KYDEX® 110 is run as a high-gloss product, which minimizes the mechanical matting from the texture rolls. Other textures may differ greatly between the primary and secondary surface colour readings, but look visually similar. Because of this, comparisons for quality purposes are done using the secondary surface. The secondary surface is the same for every lot, which minimizes differences between the machine and transverse directions.

Note: thermoforming KYDEX® 110 will change the thickness, texture, and gloss level creating a slightly different appearance from the unformed flat sheet.

#### SEKISUI SPI

ISO 9001 and 14001 Certified

#### Customer Service

6685 Low St, Bloomsburg, PA 17815 USA

Phone: 800.325.5133, +1.570.389.5810

Outside the US: +1.570.389.5814

Fax: 800.452.0155, +1.570.387.7786

Email: [info@sekisui-spi.com](mailto:info@sekisui-spi.com)

#### Technical Service

Phone: 800.682.8758

Fax: +1.570.387.8722

Outside the US: +1.570.387.6997

[techservice@sekisui-spi.com](mailto:techservice@sekisui-spi.com)

[sekisui-spi.com](http://sekisui-spi.com)

## Metallic Effects and CIE \*L\*a\*b Colour Space

TB - 130-B

### Machining Considerations

Metallic colourants added to KYDEX® 110 have an effect on the machining characteristics of the material. These colourants make KYDEX® 110 notch sensitive which may act as a crack enabler when the sheet is fabricated improperly. This makes the material more susceptible to cracks and chips when compared to KYDEX® T, KYDEX® 100 and other KYDEX® sheet grades.

It is very important to use proper cutting and machining techniques to prevent cracks and chips. Sharp blades and tools along with slower machining speeds prevent most issues. It is equally important to ensure the material is properly secured during the machining process. Vibration or movement of the material may notch the material which creates a stress point for the formation of cracks and chips. For more information on the cutting and machining of KYDEX® sheet, please refer to Technical Brief 127 - Cutting and Machining KYDEX® Thermoplastic Sheet, <http://www.kydex.com/briefs/127.pdf>.

### General Cleaning Procedure

KYDEX® 110 can be easily cleaned with common household cleaners. Due to the smooth, high gloss/metallic effect of KYDEX® 110, cleaners can leave behind a visible residue that appears as streaks or swirls. These streaks can be avoided through a few simple steps, as outlined below.

- 1) Apply one of the recommended cleaners below by means of spraying or a wipe-on application (i.e. a diluted bucket mixture). Clean as usual with sponge or wet rag.
- 2) Directly following the cleaning process, wipe the area with a clean dry rag before the liquid cleaner has a chance to dry thoroughly.

Once dry, the residue can still be removed with extra wiping or with the addition of water or extra cleaner, followed by a clean dry rag.

\*The whole sheet may have to be cleaned in order to avoid patchy differences of cleanliness.

### Recommended Cleaners

Product & Manufacturer	On the Web	In the U.S. Call
"Fomula 409®" - All Purpose Cleaner	<a href="http://www.formula409.com/">http://www.formula409.com/</a>	1-415-847-6100
"Simple Green®" All Purpose Cleaner	<a href="http://www.simplegreen.com/">http://www.simplegreen.com/</a>	1-800-228-0709

### Cleaners to avoid

Citrus based cleaners: These cleaners tend to leave behind a streaky/oily residue that is more difficult to remove than the recommended cleaners.

Citrus cleaners do a very good job of removing adhesive and other sticky residues but should then be followed with one of the recommended cleaners to remove the citrus cleaner residue. For more information on cleaning KYDEX® sheet, please refer to Technical Brief 114 – Cleaning KYDEX® Thermoplastic Sheet, <http://www.kydex.com/briefs/114.pdf>.

**SEKISUI SPI**  
ISO 9001 and 14001 Certified

**Customer Service**  
6685 Low St, Bloomsburg, PA 17815 USA  
Phone: 800.325.3133, +1.570.389.5810  
Outside the US: +1.570.389.5814  
Fax: 800.452.0155, +1.570.387.7786  
Email: [info@sekisui-spi.com](mailto:info@sekisui-spi.com)

**Technical Service**  
Phone: 800.682.8758  
Fax: +1.570.387.8722  
Outside the US: +1.570.387.6997  
[techservice@sekisui-spi.com](mailto:techservice@sekisui-spi.com)

[sekisui-spi.com](http://sekisui-spi.com)

Because we cannot anticipate or control the many different conditions under which this information and our products may be used, we do not guarantee the applicability of the accuracy of this information or the suitability of our products in any given situation. Users should conduct their own tests to determine the suitability of each product for their particular purposes. Data in the physical property table represents typical values and are to serve only as a guide for engineering design. Results are obtained from specimens under ideal laboratory conditions. Right to change physical properties as a result of technical progress is reserved. THE PRODUCTS DISCUSSED ARE SOLD WITHOUT WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR USE, EITHER EXPRESSED OR IMPLIED, EXCEPT AS PROVIDED IN OUR STANDARD TERMS AND CONDITIONS OF SALE. Buyer assumes all responsibility for loss or damage arising from the handling and use of our products, whether done in accordance with directions or not. In no event shall the supplier or the manufacturer be liable for incidental or consequential damages. Also, statements concerning the possible use of our products are not intended as recommendations to use our products in the infringement of any patent. Consult local code and regulatory agencies for specific requirements regarding code compliance, transporting, processing, recycling and disposal of our product. Product not intended for use as a heat resistant surface. Texture, product grade and other conditions may cause variations in appearance.

This information supersedes all previously published data.